

**ARROWHEAD RAINSCREEN PANEL SYSTEM
 PANEL SIZING GUIDE**

Project

Project Number

DWG-01

Drawn By
NCDS



Date Drawn
2017.04.04

Revisions
 No. _____ Date _____
 No. _____ Date _____

Sheet
1

© Copyright Fairview Architectural LLC

ARROWHEAD RAINSCREEN PANEL SIZE GUIDE		
FO = FRAME OPENING PS = PANEL SIZE = FO + 3/16"	SO = SILL OPENING PS = PANEL SIZE = SO + 1/8"	CO = CORNER OPENING (SEE DETAIL-2) PS = PANEL SIZE = CO + PD + 1/16" PD** = PANEL DEPTH = 1 15/16"
NOTE: MODIFIED BASE AH-103 CAN BE USED AT THE SILL. USE STANDARD FO MEASUREMENT FOR THIS CONDITION.		
** SIZE IS FOR 1" PANEL RETURNS TYPICAL, FOR DEEPER PANELS MODIFY FORMULA ACCORDINGLY.		

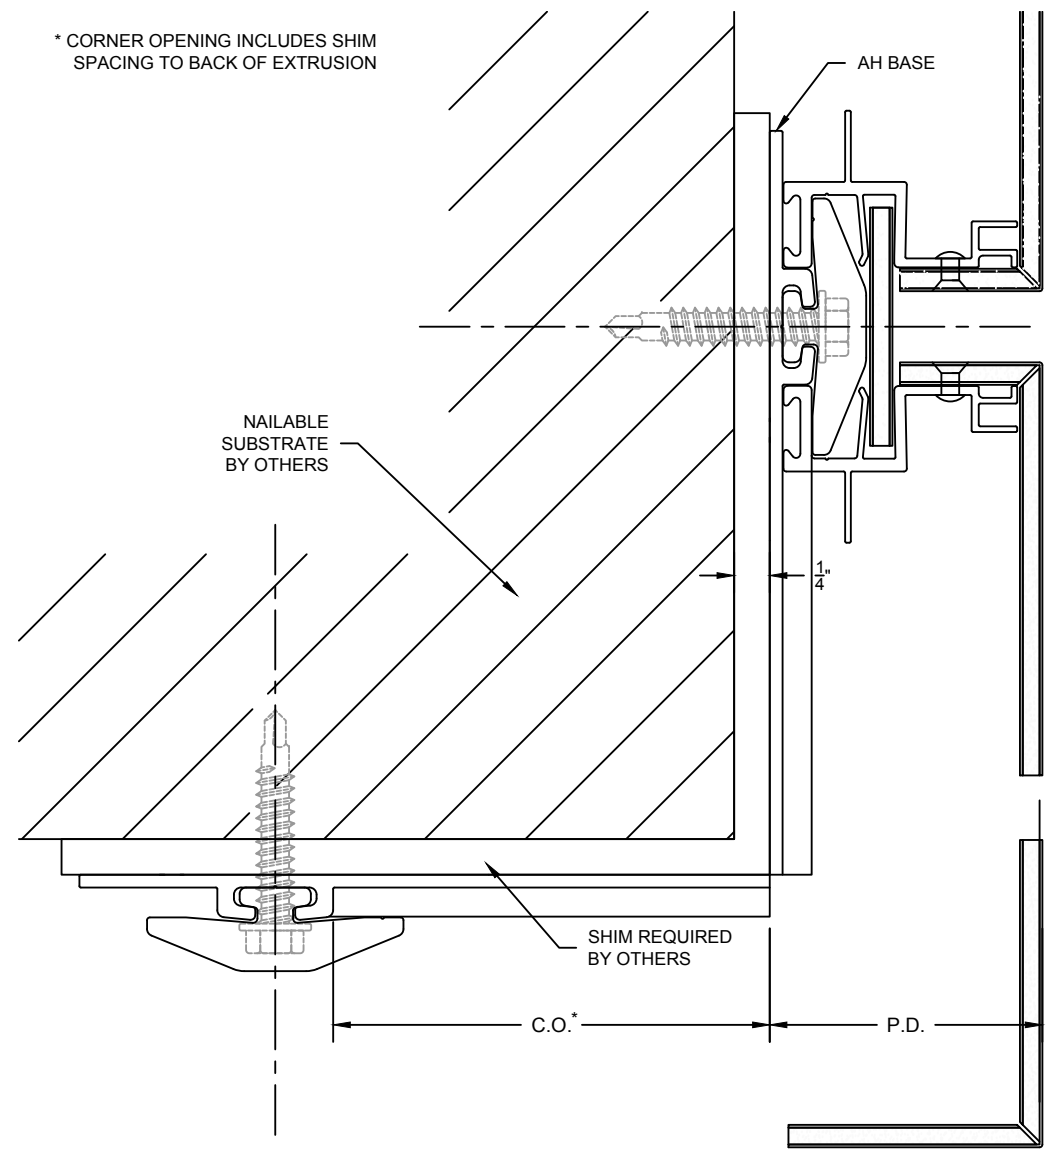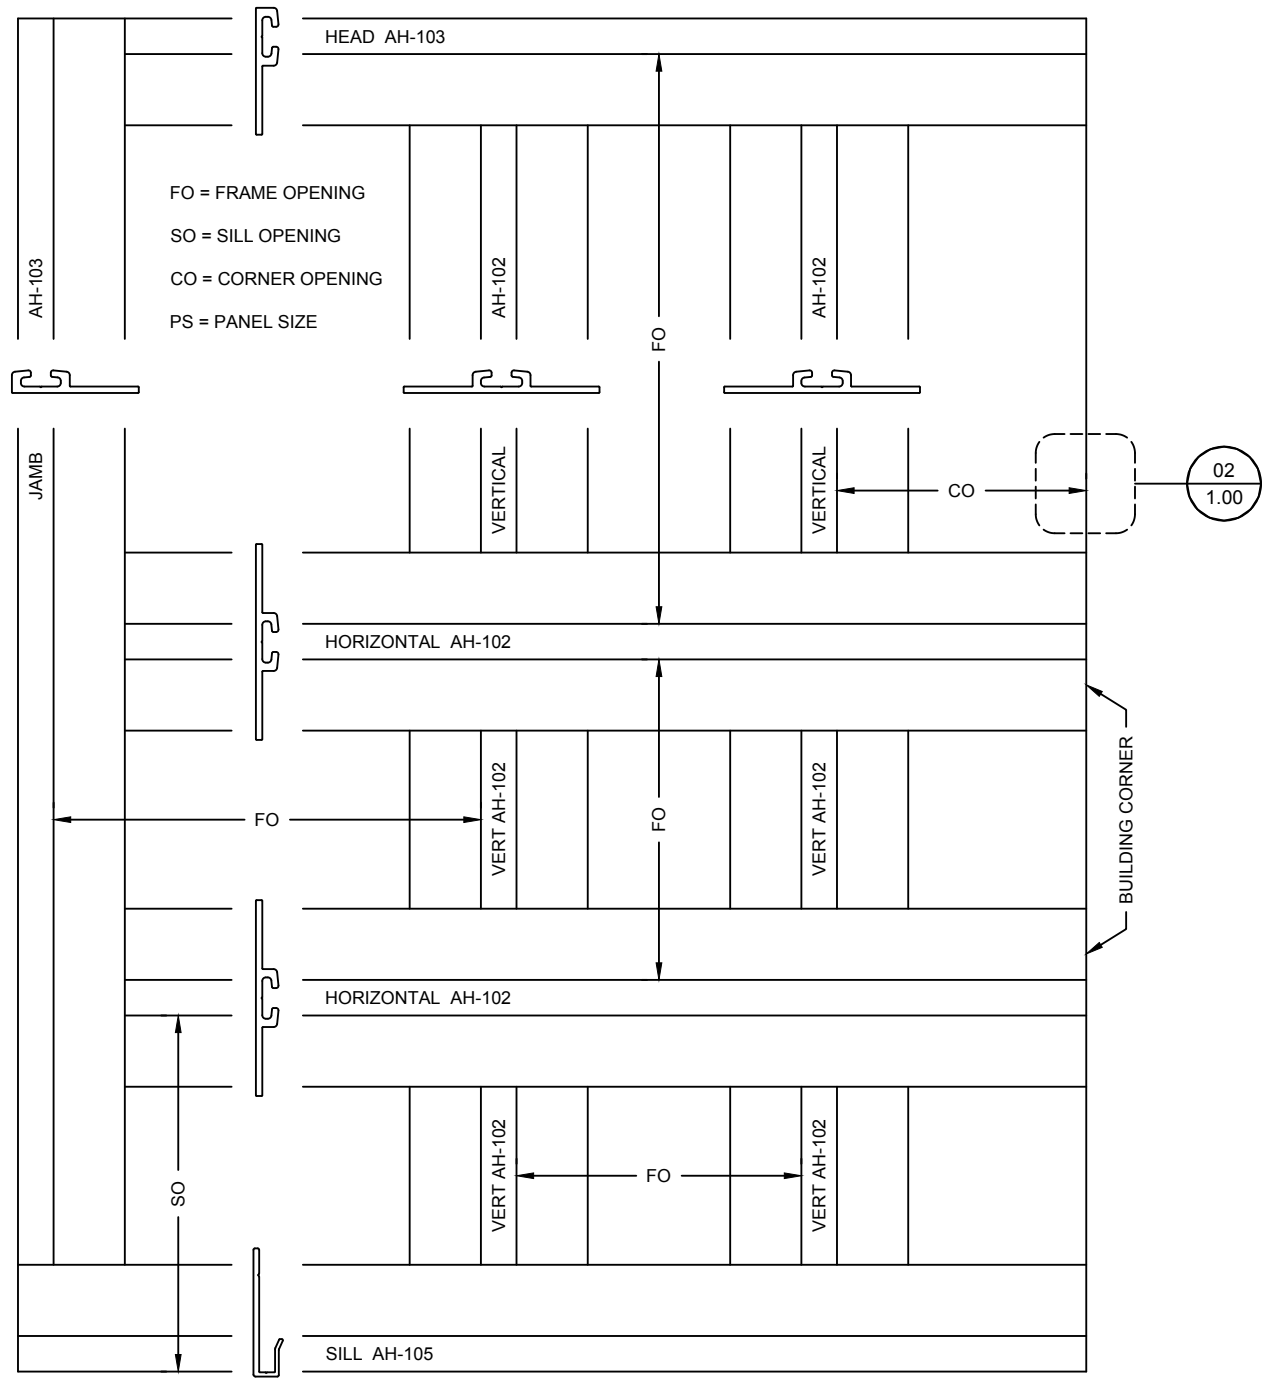

1 ELEVATION

2 DETAIL